

# DEMO9S08QG8

---

Demonstration Board for Freescale MC9S08QG8  
Also Applies to the CSM9S08QG8SLK

# CONTENTS

- CAUTIONARY NOTES .....4**
- TERMINOLOGY.....4**
- CSM9S08QG8SLK.....4**
- FEATURES .....5**
- REFERENCES .....6**
- GETTING STARTED.....6**
- OPERATING MODES .....6**
  - RUN MODE ..... 6
  - DEBUG MODE ..... 7
- SOFTWARE DEVELOPMENT .....8**
- MEMORY MAP .....8**
- DEVELOPMENT SUPPORT .....8**
  - INTEGRATED BDM\_PORT..... 9
  - BDM\_PORT HEADER..... 9
- POWER .....9**
  - POWER SELECT ..... 10
  - PWR\_SEL* ..... 10
  - VX\_EN*..... 11
- RESET SWITCH .....11**
- LOW VOLTAGE DETECT.....11**
- STOP MODES.....12**
- TIMING .....12**
- COMMUNICATIONS.....12**
  - SCI PORT..... 12
  - COM\_EN*..... 13
  - COM CONNECTOR*..... 13
  - SPI PORT..... 14
  - IIC PORT ..... 14
- USER OPTIONS .....14**
  - PUSHBUTTON SWITCHES*..... 14
  - LED INDICATORS* ..... 14
  - POTENTIOMETER*..... 15
  - PHOTOCELL*..... 15
- I/O PORT CONNECTOR.....16**

# FIGURES

Figure 1: BDM Port.....9  
 Figure 2: PWR\_SEL Option Header .....10  
 Figure 3: VX\_EN Option Header .....11  
 Figure 4: OSC\_EN Option Header .....12  
 Figure 5: COM Connector.....14  
 Figure 6: MCU I/O Port Connector .....16

# TABLES

Table 1: Run Mode Setup.....7  
 Table 2: Debug Mode Setup.....7  
 Table 3: Memory Map.....8  
 Table 4: COM\_EN Option Header .....13  
 Table 5: User Option Jumper Settings.....15

# REVISION

Date	Rev	Comments
September 19, 2005	A	Initial Release.
September 22, 2005	B	Corrected header size in Features and updated Reference file names.
November 1	C	Added reference to CSM9S08QG8SLK. Added 2x14 pin header to BOM.
January 30, 2006	D	Corrected minor editing errors
February 16, 2006	E	Corrected document number on opening page
March 2, 2006	F	Remove BOM listing

## CAUTIONARY NOTES

- 1) Electrostatic Discharge (ESD) prevention measures should be used when handling this product. ESD damage is not a warranty repair item.
- 2) Axiom Manufacturing does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under patent rights or the rights of others.
- 3) EMC Information on the DEMO9S08QG8 board:
  - a) This product, as shipped from the factory with associated power supplies and cables, has been verified to meet with **FCC** requirements as a **CLASS A** product.
  - b) This product is designed and intended for use as a development platform for hardware or software in an educational or professional laboratory.
  - c) In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate prevention measures.
  - d) Attaching additional wiring to this product or modifying the product operation from the factory configuration may affect its performance and cause interference with other apparatus in the immediate vicinity. If such interference is detected, suitable mitigating measures should be taken.

## TERMINOLOGY

This development board uses option selection jumpers. A jumper is a plastic shunt that connects 2 terminals electrically. Terminology for application of the option jumpers is as follows:

Jumper on, in, or installed - jumper is installed such that 2 pins are connected together.

Jumper off, out, or idle - jumper is installed on 1 pin only. It is recommended that jumpers be idled by installing on 1 pin so they will not be lost.

## CSM9S08QG8SLK


The CSM9S08QG8SLK is a Student Learning Kit that applies a pin header to the socket header on the DEMO9S08QG8 board. This allows the CSM9S08QG8SLK to be installed on the MCU Project Board MCU Port. See the MCU Project board user documents for more details on using the CSM9S08QG8SLK.

Throughout this document, where used, the name DEMO9S08QG8 applies equally to the DEMO9S08QG8 and to the CSM9S08QG8SLK.

# FEATURES

The DEMO9S08QG8 is an evaluation or demonstration board for the MC9S08QG8 microcontroller. Development of applications is quick and easy with the integrated USB-BDM, sample software tools, and examples. An optional BDM\_PORT port is also provided to allow use of a BDM\_PORT cable. A 32-pin connector allows connecting the DEMO9S08QG8 board to an expanded evaluation environment.

- MC9S08QG8 CPU, 16-pin DIP, Socketed
  - 8K Byte Flash
  - 512 Bytes RAM
  - Internal 32 kHz Oscillator, trimmable to  $\pm 0.2\%$
  - 12 GPIO, 1 Input Only, 1 Output only
  - Timer Interface Module
  - SCI and SPI Communication Ports
  - IIC Module
  - 8 KBI inputs
  - 2-Ch, 16-bit, Timer Interface
  - 8-Ch, 10-bit Analog to Digital Converter (ATD)
  - Analog Comparator w/ internal compare
- Integrated USB-BDM
- RS-232 Serial Port w/ DB9 Connector
- SPI, IIC ports available on Connector J1
- External 32.768 kHz Clock Oscillator (not installed)
- Power Input Selection Jumper
  - Power input from USB-BDM
  - Power input from on-board regulator
  - Power input from Connector J1
  - Power output through Connector J1
- User Components Provided
  - 3 Push Switches; 2 User, 1 Reset
  - 3 LED Indicators; 2 User, 1 VDD
- Jumpers
  - USER\_EN
  - PWR\_SEL
  - COM\_SEL
  - VX\_EN
  - OSC\_EN (not installed)
- Connectors
  - 32-pin MCU I/O Connector
  - 2.0mm Barrel Connector
  - BDM\_PORT Pin Header (not installed)
  - DB9 Serial Connector
- **Specifications:**
  - Board Size 2.9" x 2.5"
  - Power Input:
    - USB Cable – 500mA max
    - PWR Connector - 9VDC typical, +7VDC to +18VDC

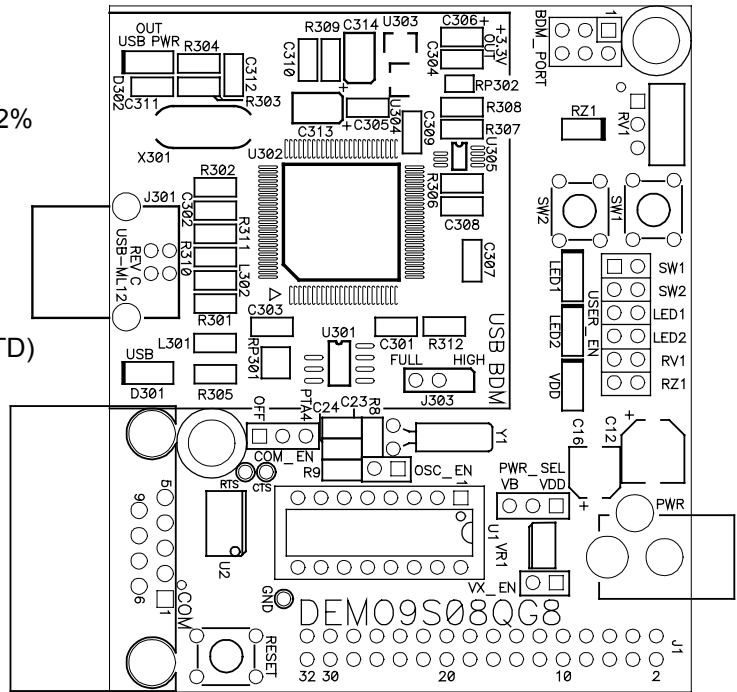

# REFERENCES

Reference documents are provided on the support CD in Acrobat Reader format.

DEMO9S08QG8_UG.pdf	DEMO9S08QG8 User Guide (this document)
DEMO9S08QG8_SCH_C.pdf	DEMO9S08QG8 Board Schematic, Rev. C
DEMO9S08QG8_QSG.pdf	DEMO9S08QG8 Quick Start Guide
DEMO9S08QG8_APP_UG.pdf	DEMO9S08QG8 Test Application User Guide
DEMO_S08QG8_Test.zip	CodeWarrior LED Demonstration application
DEMO9S08QG8_APP.zip	CodeWarrior Feature Demonstration application
AN2627.pdf	Cycle-by-Cycle Instruction Details for HC(S)08 MCU's

# GETTING STARTED

To get started quickly, please refer to the DEMO9S08QG8 Quick Start Guide included with the development kit. This quick start shows how to connect the board to the PC, run an LED test program, install the correct version of CodeWarrior Development Studio, and load an Analog to Digital (ATD) test program using CodeWarrior.

# OPERATING MODES

The DEMO9S08QG8 board operates in two basic modes Run Mode, or Debug Mode. Run Mode supports user application operation from Power-On or Reset. Debug Mode supports the development and debug of applications via the BDM\_PORT. See the related sections below for quickly starting the board in the desired mode of operation.

The board has been preloaded with a demonstration program that operates in the Run Mode. The VDD LED is lit when power is applied to the board and the PWR\_SEL option header is set correctly.

## RUN Mode

Run mode allows the user application to execute when power is applied to the board or the RESET button is pressed. Use the following settings to configure the DEMO908QG8 board for RUN Mode using the USB bus to power the board. See the POWER section below for details on configuring the board for alternate power input.

1. Connect a serial cable (not included) between the board and a host PC if needed.
2. Connect auxiliary equipment to board if needed.
3. Configure the board option jumpers as shown.

**Table 1: Run Mode Setup**

PWR_SEL	Set to VB
COM_EN	Set to PTA4
VX_EN	ON if required
USER_EN	ALL ON

4. Connect the USB cable to an open USB port on the host PC and attach to the USB port on the target board. The USB, USB\_PWR, and VDD LEDs will light and the loaded application will begin to execute.

## Debug Mode

Debug Mode supports application development and debug using the HCS08/HC(S)12 background debug mode (BDM). Background mode is accessible using either the integrated USB-BDM or an external HCS08/HC(S)12 BDM cable. Use of the integrated BDM requires only a host PC with an available USB port and an A/B USB cable. The USB cable used must be USB 2.0 compliant. A 6-pin BDM\_PORT header supports the use of an external BDM cable. This header is not installed in default configurations. The steps below describe using the integrated USB-BDM. See the POWER section below for details on configuring the board for alternate power input.

1. Connect a serial cable (not included) between the board and a host PC if needed.
2. Connect auxiliary equipment to board if needed.
3. Install and launch CodeWarrior Development Studio for HC(S)08, P&E PKGHCS08, or other software capable of communicating with the HCS08 MCU.
4. Configure the board option jumpers as shown.

**Table 2: Debug Mode Setup**

PWR_SEL	Set to VB
COM_EN	Set to PTA4
VX_EN	ON If Required
USER_EN	ON if Required

5. Connect the supplied USB cable between an available USB port on the host PC and the USB connector on the board.
6. Hosting development software will establish background communication.

# SOFTWARE DEVELOPMENT

Software development requires the use of an HCS08 assembler or compiler and a host PC running a BDM interface. CodeWarrior Development Studio for HC(S)08 is supplied with this board for debugging and flash programming.

## MEMORY MAP

The table below shows the MC9S08QG8 memory map. Attempting to access unimplemented memory locations will cause an illegal-address reset. The memory map is grouped into 3 broad categories; Registers, RAM, and Flash. In the memory map below, the non-volatile registers and vector table are located at the top of the Flash block.

**Table 3: Memory Map**

0x0000 – 0x005F	Direct Page Registers	96 bytes
0x0060 – 0x025F	RAM	512 bytes
0x0260 – 0x17FF	Unimplemented	5,536 bytes
0x1800 – 0x184F	High Page Registers	80 bytes
0x1850 – 0xDFFF	Unimplemented	51,120 bytes
0xE000 – 0xFFAF	FLASH	8192 bytes
0xFFB0 – 0xFBFF	Non-Volatile Registers	
0xFC00 – 0xFFFF	Vectors	

**NOTE:** Accessing unimplemented memory locations causes an illegal-address reset.

## DEVELOPMENT SUPPORT

Application development and debug for the target MC9S08QG8 is supported through the BDM interface. The debug interface consists of an integrated USB-BDM debugger and an optional 6-pin header (BDM\_PORT). The BDM\_PORT header is not installed in default configuration and may be installed by the user if needed.



# Integrated BDM\_PORT

The DEMO9S08QG8 board features an integrated USB-BDM debugger from P&E Microcomputer Systems. The integrated debugger supports application development and debugging via the background debug mode. A USB, type B, connector provides connectivity between the target board to the host PC.

The integrated debugger provides power and ground to the target, thereby eliminating the need to power the board externally. When used, power from the USB-BDM circuit is derived from the USB bus; therefore, total current consumption for the target board, and all connected circuitry, must not exceed **500mA**. Excessive current drain will violate the USB specification causing the USB bus to disconnect; power is removed from the target forcing a POR.

**CAUTION:** Violating the USB specification will cause the USB bus to disconnect forcing the target to reset.

## BDM\_PORT Header

An HCS08/HC(S)12 BDM cable may be attached to a 6-pin BDM\_PORT port header. However, this header is not installed in default configuration. Use of this port requires the user to install a 2x3, 0.1” center, pin header. Refer to the BDM cable documentation for details on the use of the BDM cable. The BDM\_PORT header pin-out is shown below.

**Figure 1: BDM Port**

PTA4/ BKGD	1	2	GND	See the HCS08 Device User Guide for complete BDM_PORT documentation	
	3	4			PTA5/RESET*
	5	6			VDD

**NOTE:** This header is not installed in default configuration.

# POWER

The DEMO9S08QG8 is designed to be powered from the USB\_BDM during application development. A 2.0mm barrel connector has been applied to support stand-alone operation. In addition, the board may be powered through connector J1. The board may also be configured to supply power through connector J1 to external circuitry.

When using the integrated USB-BDM, the board draws power from the USB bus. Total current consumption of the board and connected circuitry, therefore, must be limited to less than **500mA**. Excessive current drain will violate the USB specification causing the USB bus to disconnect. This will force a power-on-reset (POR).

**CAUTION:** Violating the USB specification will cause the USB bus to disconnect, forcing the target to reset.

A 2.0mm barrel connector input has been provided to allow stand-alone operation. Voltage input at this connector must be limited to between +5V and +18V. An LDO voltage regulator at VR1 converts the input voltage to the +3.3V rail on the target board. VR1 will shut down if the connected circuit draws excessive current. Stand-alone operation is also supported through connector J1.


## POWER SELECT

Power may be applied to the board through the integrated USB-BDM circuitry, a 2.0mm barrel connector, or through connector J1. Power selection is achieved by using 2 option headers: PWR\_SEL option header and the VX\_EN option header.

The PWR\_SEL option header selects power input either from the integrated USB-BDM circuitry or from the on-board voltage regulator. Power input selection, from the USB-BDM or the on-board power supply, is mutually exclusive. This prevents power-input contention from damaging the board. The figure below details the PWR\_SEL header connections.

### *PWR\_SEL*

**Figure 2: PWR\_SEL Option Header**

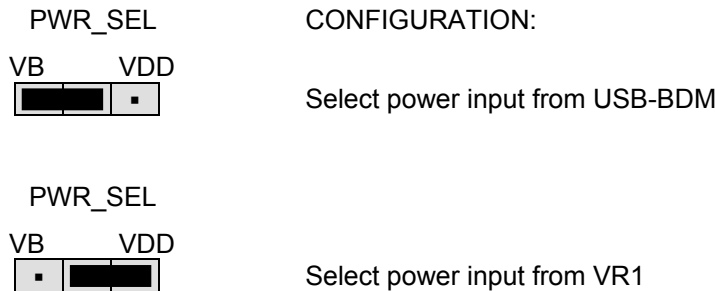

Power from the integrated BDM is drawn from the USB bus and is limited to **500mA**. Excessive current drain will violate the USB specification will cause the USB bus to disconnect.

**CAUTION:** Violating the USB specification will cause the USB bus to disconnect. This will cause the board to reset.

The on-board voltage regulator (VR1) accepts power input through a 2.0mm barrel connector (PWR). Input voltage may range from +5V to +18V. The voltage regulator (VR1) provides a +3.3V fixed output limited to 250mA. Over-temperature and over-current limits built into the voltage regulator protects the device from excessive stresses.


The user should consider the maximum output current limit of the selected power source when attempting to power off-board circuitry through connector J1.

## VX\_EN

The VX\_EN option header is a 2-pin jumper that connects the target board voltage rail to J1-1. J1-3 is connected directly to the ground plane. Use of this feature requires a regulated +3.3V input power source. This power input is decoupled to minimize noise input but is not regulated. Care should be exercised when using this feature; no protection is applied on this input and damage to the target board may result if over-driven. Also, do not attempt to power the target board through this connector while also applying power through the USB-BDM or the PWR connector; damage to the board may result.

Power may be sourced to off-board circuitry through the J1 connector. The current limitation of the USB bus or the on-board regulator must be considered when attempting to source power to external circuitry. Excessive current drain may damage the target board, the host PC USB hub, or the on-board regulator. The figure below details the VX\_EN option header connections.

**Figure 3. VX\_EN Option Header**

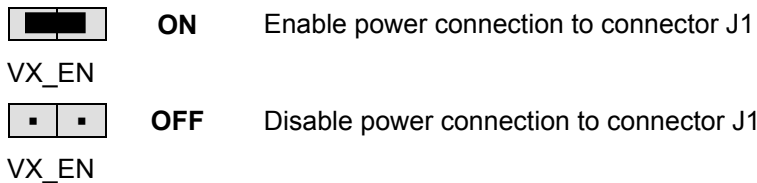

**CAUTION:** Do not apply power to connector J1 while also sourcing power from either the PWR connector or the USB-BDM circuit. Damage to the board may result.

**NOTE:** Do not exceed available current supply from the USB-BDM cable or on-board regulator when sourcing power through connector J1 to external circuitry.

## RESET SWITCH

The RESET switch provides a method to apply an asynchronous reset to the MCU and is connected directly to the PTA5/RESET\* input on the MCU. Pressing the RESET switch forces the MCU RESET\* input low. The MC9S08QG8 MCU applies an internal pull-up on the RESET\* line to prevent spurious resets and allow normal operation.

## LOW VOLTAGE DETECT

The MC9S08QG8 utilizes an internal Low Voltage Detect (LVD) to protect against under-voltage conditions. The LVD is enabled out of RESET. Consult the MC9S08QG8 Device User Guide for details on configuring LVD operation.

# STOP MODES

The MC9S08QG8 can be configured for three different low power stop modes. If stop1 or stop2 modes are entered, an external pull-up resistor must be placed between the PTA5/RESET\*/IRQ\*/TCLK pin and VDD. This pull-up resistor is not included on the DEMO9S08QG8 board. If these modes will be used with this board, a 10K – 50K ohm resistor can be placed between pins J1-1 and J1-2 to ensure proper operation of the MCU. The jumper for the VX\_EN header must also be in place in this case. Consult the MC9S08QG8 Device User Guide for more details on configuring the low power stop modes.


# TIMING

By default, the DEMO9S08QG8 uses timing provided from an internal 32 kHz frequency reference and an internal frequency-locked loop (FLL). The FLL output is trimmable to  $\pm 0.2\%$  of nominal. Refer to the MC9S08QG8 Device User Guide for further details on clock operation.

Component pads for an optional 32.768 kHz crystal oscillator circuit have also been provided to support external timing input. The external crystal is connected to the PTB6/XTAL and PTB7/EXTAL MCU inputs. This alternate timing source is configured for Pierce mode operation.

The alternate timing source components are not installed in default configurations. Refer to the board schematic to populate this option and associated support components.

**Figure 4: OSC\_EN Option Header**

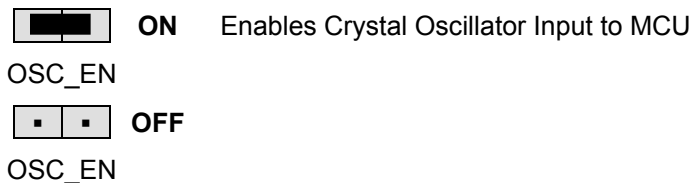

**NOTE:** This option header is not installed in default configuration.

# COMMUNICATIONS

The DEMO9S08QG8 board provides a Serial Communications Interface (SCI) port, a Serial Peripheral Interface (SPI) port, and an Inter-Integrated Controller (IIC) port. RS-232 communications are supported through a DB9 connector. SPI and IIC communications are supported through connector J1. The COM\_EN option header enables SCI operation on the board.

## SCI Port

An RS-232 transceiver provides RS-232 to TTL/CMOS logic level translation between the COM connector and the MCU. The COM connector is a 9-pin Dsub, right-angle connector. A




ferrite bead on shield ground provides conducted immunity protection. Communication signals TXD and RXD are routed from the transceiver to the MCU. These signals are also available on connector J1. Hardware flow control signals RTS and CTS are available on the logic side of U3 and are routed to test point vias located near the transceiver (U4). RTS has been biased properly to provide handshaking if required.

Communications signals TXD and RXD connect to general purpose Port B signals. The RS-232 transceiver should be disabled via the COM\_EN option header if these signals are used as GPIO. The transceiver should also be disabled if the TXD and RXD signal inputs at connector J1 are used.

### COM\_EN

The COM\_EN option header determines the operational status of the RS-232 transceiver. In the OFF position, the transceiver is disabled and all outputs are tri-stated. In the PTA4 position, the transceiver may be turned on or off using MCU GPIO signal PTA4. With the option jumper removed, the transceiver is always on. When the transceiver is ON, the AutoShutoff feature of the device is disabled.


**Table 4: COM\_EN Option Header**

OFF	PTA4		MCU controls RS-232 Transceiver
COM_EN			
OFF	PTA4		RS-232 Transceiver disabled
COM_EN			
OFF	PTA4		RS-232 Transceiver always ON. AutoShutoff disabled
COM_EN			

### COM Connector

A standard 9-pin Dsub connector provides external connections for the SCI port. The Dsub shell is connected to board ground through a ferrite bead. The ferrite bead provides noise isolation on the RS-232 connection. The DB9 connector pin-out is shown below.

**Figure 5: COM Connector**

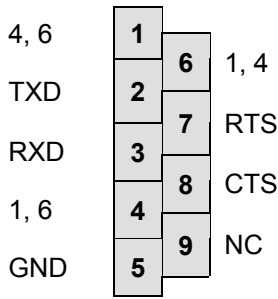

Female DB9 connector that interfaces to the HC(S)08 internal SCI1 serial port via the U2 RS232 transceiver. It provides simple 2-wire asynchronous serial communications without flow control. Flow control is provided at test points on the board.

**Pins 1, 4, and 6 are connected together.**

## SPI Port

SPI signaling connects directly between connector J1 and the MCU. Refer to the MC9S08QG8 Device User Guide for details on using the SPI interface.

## IIC Port

IIC signaling connects directly between connector J1 and the MCU. Refer to the MC9S08QG8 Device User Guide for details on using the IIC interface.

# USER OPTIONS

The DEMO9S08QG8 includes various input and output devices to aid application development. User I/O devices include 2 momentary pushbutton switches, 2 green LEDs, 1 potentiometer, and 1 phototransistor. Each device may be enabled or disabled individually by the USER\_EN option header. Each user enable is clearly marked as to functionality.

### *Pushbutton Switches*

Two push button switches provide momentary, active-low input, for user applications. Pull-ups internal to the MCU must be enabled to provide error free switch operation. Pushbutton switches SW1 and SW2 are enabled to the MCU I/O ports by the USER option bank. SW1 and SW2 connect to input ports PTA2 and PTA3 respectively. Table 5 below details the user jumper settings.

### *LED Indicators*

Indicators LED1 and LED2 are enabled from HC(S)08 I/O ports by the USER option bank. Each LED is active-low and illuminates when a logic low signal is driven from the respective MCU I/O port. MCU ports PTB6 and PTB7 drive LED1 and LED2 respectively. Table 5 below details the user jumper settings.

### Potentiometer

A 5k ohm, thumb-wheel type, potentiometer at RV1 provides variable resistance input for user applications. The output is the result of a voltage divider that changes as the thumb-wheel is turned. The potentiometer is connected between VDD and GND with the center tap providing the divider output. This center tap is connected to the MCU on signal PTA0. Table 5 below details the user jumper settings.

### Photocell

A surface-mount phototransistor provides light sensitive, variable input for user applications. Current flow within the phototransistor is inversely proportional to light intensity incident on the surface of the device. A rail-to-rail OP amp at U2 boosts the photocell output to useable levels. This signal is available to the MCU on signal PTA1. Table 5 below details the user jumper settings.

**Table 5: User Option Jumper Settings**

Jumper	On	Off	MCU PORT	MCU PIN
SW1	Enable SW1	Disable SW1	PTA2	14
SW2	Enable SW2	Disable SW2	PTA3	13
LED1	Enable LED1	Disable LED1	PTB6	6
LED2	Enable LED2	Disable LED2	PTB7	5
RV1	Enable RV1	Disable RV1	PTA0	16
RZ1	Enable RZ1	Disable RZ1	PTA1	15

# I/O PORT CONNECTOR

This port connector provides access to DEMO9S08QG8 I/O signals. Signal positions not shown listed are not connected on the board.

**Figure 6: MCU I/O Port Connector**

VDD	1	2	PTA5/RESET*/IRQ*/TCLK
VSS	3	4	PTA5/ RESET*/IRQ*/TCLK
PTB1/KBI1P5/ADC1P5/TXD1	5	6	PTA4/BKGD/MS/ACMP10
PTB0/KBI1P4/ADC1P4/RXD1	7	8	PTB7/SCL1/EXTAL
PTA2/KBI1P2/ADC1P2/SDA1	9	10	PTB6/SDA1/XTAL
PTA3/KBI1P3/ADC1P3/SCL1	11	12	
PTA5/ RESET*/IRQ*/TCLK	13	14	
PTA0/KBI1P0/ADC1P0/TPM1CH0/AMCP+	15	16	
PTB3/KBI1P7/ADC1P7/MOSI1	17	18	PTA1/KBI1P1/ADC1P1/ACMP1-
PTB4/MISO1	19	20	PTA0/KBI1P0/ADC1P0/TPM1CH0/AMCP+
PTB2/KBI1P6/ADC1P6/SPSCK1	21	22	
PTB5/TPM1CH1/SS1	23	24	
PTA1/KBI1P1/ADC1P1/ACMP1-	25	26	
PTB6/SDA1/XTAL	27	28	
PTB7/SCL1/EXTAL	29	30	
PTA4/BKGD/MS/ACMP10	31	32	